



Exploded View

The placements of the dadoes on the underside of the seat are marked by setting up the bench and tracing the locations directly onto the stock. The author then located the dowels on the legs by shooting a pin into the locations indicated below and then setting the legs in place to mark them.

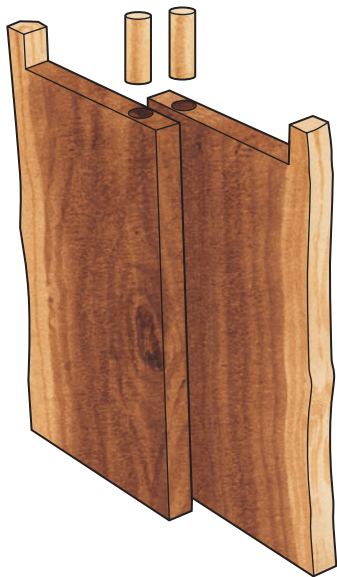

**Seat
(Bottom View)**

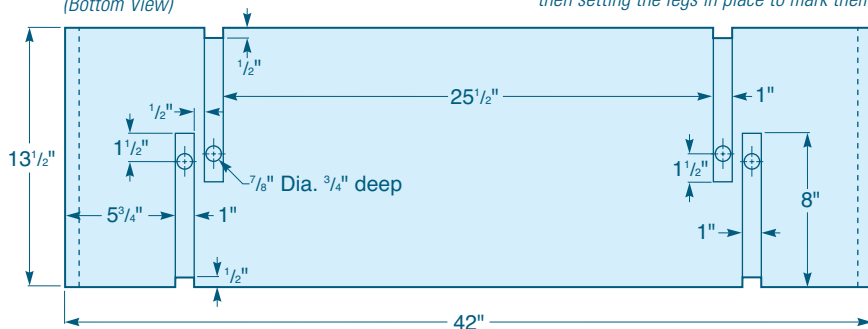

**Leg
(Side View)**

