


MATERIAL LIST	
1 Front, Back (4)	T x W x L 5/8" x 5¾" x 15¾"
2 Sides (4)	5/8" x 5 ³ / ₄ " x 18"
3 Bottom (2)	1/4" x 15" x 17½"


Construction Notes:

Bottom panel grooves in front and back panels (pieces 1) must stop short of the ends of the pins. Start and stop these cuts on the router table with a 1/4" straight or spiral bit. Rabbet, box or half-blind joinery could be used as substitutes for through dovetail joints shown here.

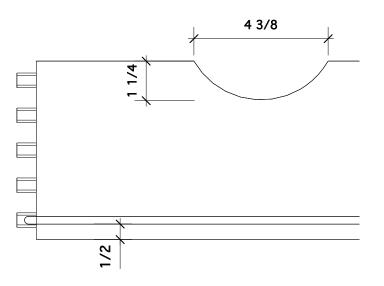



Panel Groove

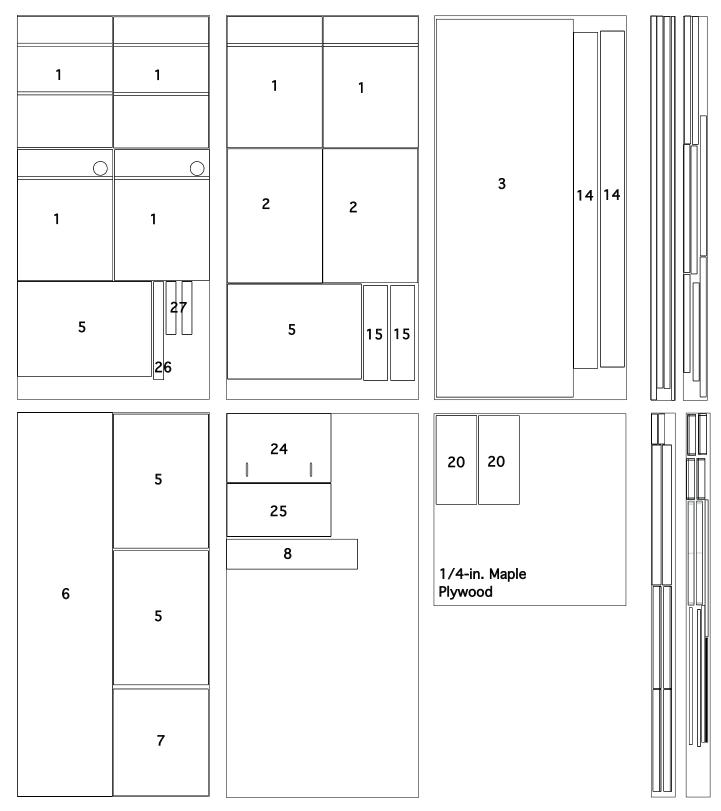

Ultimate Miter Saw Station Plywood, Solid Wood Cutting Diagrams

Materials Needed:

- 4.5 to 5 sheets 3/4" Maple Plywood
 Quarter or half sheet 1/4" Maple Plywood (Doors)
- 32 BF Solid Maple