



Band Saw Box Pattern

The blank dimensions should be approximately 8 inches square. The blank should have a minimum thickness of 3 inches and can be up to 5 inches thick. It can be made from a solid piece of wood or be a glued-up construction.


Make multiple copies of the pattern as you require. Personal use of this pattern, whether printed from the PDF or reproductions on a copier, does not infringe on Woodworker's Journal copyright. No permission is required.

The location of the entry cut to form the drawer.


Cut on the inside of this line.

This shaded area represents the waste to be removed from the upper drawer.

Drill the shallow accent circle with a Forstner bit.

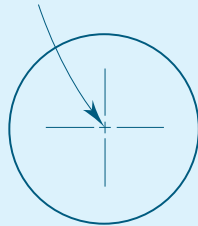

Drill the shallow accent circle with a Forstner bit.

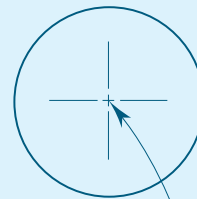

This shaded area represents the waste to be removed from the lower drawer.

Cut on the inside of this line.

The location of the entry cut to form the drawer.

Base Blank

Can be cut away from the overall blank as the circular section is sawn away.

Angle the edges and ends of the base blanks at 20 degrees.